




BATHROOM DIY PROJECT

PRIMER HAS A MILDEW RESISTANT PRIMER FINISH

SUPPLYLIST

- Primer: KILZ® Kitchen & Bath
- Paint: KILZ Complete Coat®
 - Walls – White RJ110
 - Cabinets – Soothing Ocean RD160-01
- 3/8"-1/2" Nap Paint Roller
- Paint Brush
- Drop Cloth
- Tape
- Damp Cloth
- Can Key
- Stir Stick
- Screwdriver
- 100-150 Grit Sandpaper
- 180-220 Grit Sandpaper

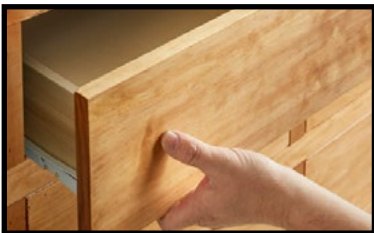

VANITY

- 1** Remove vanity drawers and hardware, putting each screw back into its hardware and sealing them together with painter's tape. You'll want to label each set to ensure you can put each screw back exactly where it came from, ensuring the least amount of stress on the wood.



- 2** Sand the surface of the vanity body and all drawers, doing a first pass with 100-150 grit sandpaper then finish with a second pass of 180-220 grit sandpaper.



- 3** After sanding, wipe down the surfaces with a damp cloth to remove any dust or residue and allow to dry. Tape around the vanity body where the wood meets the walls and countertop to protect those areas.



- 4** Apply KILZ® Kitchen & Bath (stirring thoroughly before and occasionally during use) to the vanity body and drawers, moving in the same direction as the wood grain for best results. Allow primer to dry for 1 hour.



- 5** Once the primer is dry, apply KILZ Complete Coat® in Soothing Ocean. Remove the painter's tape before the paint is fully dry.

- 6** Once everything is dry, reattached your hardware and put the drawers back into place.

Always remember to refer to our website kilz.com or product back labels for additional information on which primer is right for your project and detailed instructions on how to apply our products.